Programming Summary Table

	Steps 1	2	3	4	5	6	7	8
Description	Master code	Function No.	1st Data	2nd Data	3rd Data	4th Data	Confirm	Escape
Enter Program mode	Master code #							
Single User Code	Master code #	#	User Code #				#	AUTO
Relay time	Master code #	1#	Time(seconds)#				#	*
Install Codes (24 hour)	Master code #	2#	User Code #				#	*
Install Codes (with time zone)	Master code #	2#	User Code #	Time Zone				*
Set Clock	Master code #	3#	Time (24Hr) #				#	*
Services Mode	Master code #	4#	Time Zone #				#	*
Latch Mode	Master code #	5#	Time Zone #				#	*
Sounder Time	Master code #	6#	Time(seconds)#				#	*
Code Capacity	Master code #	7#					#	*
Time Settings (T1 and T2)	Master code #	8#	Time 1 #	Time 2 #			#	*
Time Settings (T1 to T4)	Master code #	8#	Time 1 #	Time 2 #	Time 3 #	Time 4 #	#	*
Delete Codes	Master code #	9#	Code to Delete				#	*
Delete All User Codes	Master code #	10#					#	*
Reprogram Master code	Current Master Code #	12#	New 6 Digit Master Code #				#	*
Escape Program Mode								*